

# **FISKARS®**

# Waterwheel Manual XL with wheels, all-in & Waterwheel Manual XL with wheels, empty

Original instructions: Models, All-in 1062256 / Empty 1062257

Fiskars Finland Oy Ab Keilaniementie 10, P.O. Box 91 FI-02151 Espoo, Finland Tel. +358 (0)204 3910

Fiskars brand is a registered trademark of Fiskars Corporation.

For packaging recycling information: fiskars.com/pack



CE

ATTENTION:

PLEASE READ THE MANUAL BEFORE USING

### Horizontal placement and 360° rotation lock pedal for easier reel in

- Ready-to-use set · Up to 50 meters hose capacity
- Handle with SoftGrip for easy transport around the garden/lawn.
- Telescopic handle for better ergonomics with intuitive locking mechanism
- Universal fit. Fits with other brands  $\cdot$  High pressure tested  $\cdot$  UV resistant
- **Ground installed soft pads** for extra gripping ground or patio Large foldable handle for easy manual reeling in hose
- Oscillator for even hose allocation within the waterwheel compatible with hoses 13-19 mm (1/2" 3/4")

#### Waterwheel Manual XL with wheels, all-in (1062256) instructions for use:

- 1. Take the tap connector and choose the right thread size. The included tap connector has 3 thread sizes. Install the tap connector on the outdoor tap.
- 2. Connect the inlet hose to the tap and connect it to the reel. Connect nozzle to the outlet hose
- $\textbf{3.} \ \text{For stability and } 360^{\circ} \ \text{function, place the reel horizontally. Pull the outlet hose to the desired length.}$
- Rotate nozzle head to start watering.
- 5. Before retracting the outlet hose, close the water source from the tap.

Retract the hose manually by rotating the foldable handle.

Tips: If you wish to lock the reel in a certain direction, place the reel in a horizontal position and press the 360° function lock pedal to the ground to lock the reel. To unlock the direction, press the pedal again. For additional stability, use the ground spike to anchor the reel to the ground.

If needed, you can replace both the inlet and outlet hose. The Waterwheel XL features a maximum outlet hose capacity of 19mm (3/4") - 30m, 15mm (5/8") - 40 m and 13mm (1/2") - 50m. The inlet hose can be chosen freely.

## Waterwheel Manual XL with wheels, empty (1062257) instructions for use:

The Waterwheel XL features a maximum outlet hose capacity of 19mm (3/4") - 30m, 15mm (5/8") - 40 m and 13mm (1/2") - 50m. The inlet hose can be chosen freely.

- A. Equip yourself with hoses, hose connectors, a nozzle and a tap connector of your choice.
- B. Install the hose connectors to the outlet hose and connect the hose to the reel. Repeat the same with the inlet hose.
- C. Uncoil the hose to avoid possible kinks and twists. Retract the hose by manually rotating the foldable handle.
- 1. Take the tap connector and choose the right thread size. The included tap connector has 3 thread sizes. Install the tap connector to the outdoor tap.
- 2. Connect the inlet hose to the tap and connect it to the reel. Connect nozzle to the outlet hose
- 3. For stability and 360° function, place the reel horizontally. Pull the outlet hose into the desired length.
- 4. Activate water flow on nozzle to start watering.
- 5. Before retracting the outlet hose, close the water source from the tap.

Retract the hose manually by rotating the foldable handle.

Tips: If you wish to lock the reel in a certain direction, place the reel in a horizontal position and press the 360° function lock pedal to the ground to lock the reel. To unlock the direction, press the pedal again. For additional stability, use the ground spike to anchor the reel to the ground.

Warning: Risk of injury due to fingers jamming. Watch your fingers when retracting hose. • Always close the water source (water tap) after use of garden watering products. • Do not direct the water jet towards electrical equipment! • Do not direct the water jet towards persons or animals! . No drinking water

Warranty terms: The manufacturer shall repair or replace, through the dealer, any parts of the product found to be faulty due to manufacturing defects, for a period of 24 months as of the date of purchase. The warranty does not cover defects due to tampering, improper use or wear. The warranty is valid only if the customer returns

the product to the dealer complete in all its parts together with the receipt or other document proving the date of purchase.

**EU Declaration of Conformity** Fiskars Oy, Finland hereby certifies that when leaving Fiskars factory the Waterwheel Manual XL with wheels is in accordance with harmonized EU guidelines, EU standards of safety and product specific standards. This certificate becomes void if the units are modified without Fiskars approval. CE declaration of conformity in accordance with European Machinery Directive 2006/42/EC annex I and other applicable directives.

#### STORE IN A FROST-FREE ENVIRONMENT

- IN Fiskars UK Limited. Wedowood Drive. Barlaston. Stoke-on-Trent. Staffordshire. ST12 9ER. ukconsumercare@fiskars.com





